

KIESLECT

Kr Smart Watch User Manual



Scan the QR code with your mobile phone
to get the manual in more languages

Please refer to this manual before using the product
V1.0.3

Notes:

1.1 The company reserves the right to modify the contents of this manual without any further notification. It is normal that some functions may vary in certain versions of software.

1.2 Please charge this product with the configured cable for no less than 2 hours before using it.



1.3 Before using the product, you need to connect the APP synchronization time and set your personal information.

1.4 This product supports IP68 rank waterproof, not suitable for deep sea diving, hot water, tea and other corrosive liquids are destructive to the watch, and will not be able to enjoy the product warranty and free maintenance services.

01 How to wear

Please wear the device on your wrist correctly, about one finger from the carpal and adjust it to comfortable position. Below pictures as reference.

Tip: Please wear the device a bit little tighter when heart rate monitor.



02 How to download & connect to APP

02.1 There are 3 methods to download & install APP:

A. Long press the upper button to power on, scroll down on watch face, click "Settings-QR Code", use your mobile phone to scan the QR Code to download and install "Gloryfit " APP.




B. Scan below "GloryFit" QR Code to download and install "GloryFit" APP.



C. Search "GloryFit" in APP Store or Play Store to download and install "GloryFit" APP.

02.2 Open "GloryFit" and select "Select device" on the device page, search Kr(ID-xxxx), then follow the instructions on the screen.




If the GloryFit APP is successfully connected, you can see this icon "📶" at the top of the setting page.




02.3 How to connect to BT call feature:

Using BT call feature and playing music on the watch must be successfully connected to audio Bluetooth.

After the APP and the watch are successfully bound, it will automatically prompt whether to pair with the audio Bluetooth Kr (ID-xxxx), and you can directly pair it.




iOS phone




Android phone

*** Be sure to check whether the mobile phone audio Bluetooth "Kr(ID-xxxx)" is successfully connected, you need to enter the phone "Settings"- "Bluetooth". If not, you need to enter the phone "Settings"- "Bluetooth"- "Search audio Bluetooth "Kr(ID-xxxx)"- Click "Kr(ID-xxxx)" to pair.**

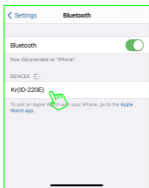

iOS phone

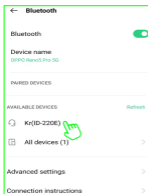

Android phone

If you want to confirm the audio Bluetooth whether successfully connected on watch, you also can slide left from Main Page to the sixth page or double-click the down button.



Slide to page 6




Bluetooth connected



Bluetooth disconnected

Tips:

- (1) Please upgrade the APP to latest version to get a better experience.
- (2) Android 5.0 and iOS 9.0 or above system are compatible with the APP.
- (3) For the first time connection with iPhone, "Pair" reminder will pop-up, click to pair, then incoming calls and instant messages will be pushed.
- (4) For the first time connection with Android, "Permissions" reminder will pop-up, please follow up the guidance and allow permissions to ensure all functions working properly.
- (5) To connect successfully, please turn on mobile phone's Bluetooth, GPS and network.
- (6) If the device cannot be searched or connected during use, please reset or turn off the watch to try again.
- (7) You can't turn off your Watch while it's charging. To turn off your Watch, first disconnect it from the charger.
- (8) If you need to use the functions involved in the following pictures, such as Heart rate monitoring, make sure that the "GloryFit" APP switch is on.



03 Operating Instructions

a. Setting page: Slide down from main page, go to shortcut page.



b. Information page: Slide up from main page.



c. Main Menu page: Slide right from the main page. You can change the menu styles by double click on upper button or change on setting page.



d. Shortcut page: Slide left from main page.



e. Quick access to change watch faces: Long press the watch face on main page, slide left or right to choose watch faces.




f. Power on / off: Press and hold the upper button for 3s+ on the main page.



g. Normal operation: Press the upper side button to return back to previous page. On main page, press the upper side button to turn on/off the screen, and press the down side button to enter the exercise shortcut list.

04 Function introduction

A circular menu with a black background. It contains four items, each with a colored icon and text: a green running icon for "Running", a blue treadmill icon for "Treadmill", a green walking icon for "Walking", and an orange alpinism icon for "Alpinism".	<p>Sport Modes: 70 sport modes are supported. Running/Treadmill/Walking/Alpinism. More details can be viewed in APP.</p>
A circular menu with a black background. It displays three status items in horizontal bars: a green bar for "20456 Steps", an orange bar for "4037 Kcal", and a blue bar for "10.27 Km". Each bar has a small icon to its right.	<p>Status: Record the number of steps, distance, and calories for the day. More detailed information analysis and data records can be viewed in the APP.</p>
A circular menu with a black background. It contains four items: a green keypad icon for "Keypad", a blue call logs icon for "Call Logs", a blue contacts icon for "Contacts", and an orange switch icon for "Switch".	<p>Phone: Keypad: Connect the phone to dial out, you can make a call on the watch. Call Logs: Record your call history. Contacts: Contacts can be added synchronously on the APP. Switch: Turn off the BT Switch, the Bluetooth will be disconnected, and the phone call and audio functions can not be used normally.</p>
A circular menu with a black background. It features a red blood drop icon with "02" inside, and a large white "98%" below it. At the bottom, there is a small red circular icon.	<p>Blood Oxygen: Test the current blood oxygen value, it monitors blood oxygen throughout the day, more detailed information analysis and data records can be viewed in the APP. (The value is for reference only and cannot be used as a medical basis.)</p>



Heart Rate Monitoring: Measure the current heart rate value, the watch can record and display the heart rate value for 24 hours throughout the day, and automatically monitor the heart rate every 10 minutes. More detailed information analysis and data records can be viewed in the APP. (The value is for reference only and cannot be used as a medical basis.)




Sleep: Record and display the total sleeping hours, deep sleep "06H 28M" and light sleep "02H 36M" of the previous night. More detailed information analysis and data records can be viewed in the APP.




Weather: Display the current weather conditions and the weather for the next 3 days. The weather information will be displayed once connecting to the APP. If the connection is disconnected for a long time, the weather information will not be updated.




Music Control: After connecting to the mobile phone, you can click "play/pause/previous/next song" on the smart watch to control the music from mobile phone, and the volume can be adjusted. The icon "🔊" just means the APP successfully connected, not stand for the audio Bluetooth successfully connected.



Message Push: Message reminders, sync notification push from your phone, save 8 latest message reminders. The longest message cannot exceed 70 characters.



Alarm: 8 alarm reminders can be set, the watch will vibrate and the screen will be bright.




Pressure: Measure the current pressure, the watch can record and display the pressure value 24 hours a day. More detailed information analysis and data records can be viewed in the APP. (Values are for reference only and cannot be used as medical basis.)



Mood: Test the current mood. More detailed information analysis and data records can be viewed in the APP. (The values are for reference only and cannot be used as medical basis.)



Voice Assistant: Double-click the down button to enter the voice assistant, click the voice assistant, according to the voice assistant "word" of phone to wake up the phone function. (Note: The watch needs to be connected to the mobile phone via Bluetooth and the phone page must be unlocked before it can be used.)



Breath Rate: Measure the current respiratory rate. (Values are for reference only and cannot be used as medical basis.)



Breath: You can set the breathing rhythm and time, and follow the training prompts to complete the breathing training.




Games: Bird game/Numbers klotski.



Physiological Cycle: Set the personal information to "female" on APP, and turn on the physiological cycle function to display the corresponding safety period, menstrual period, and ovulation period reminders on the watch side.



Functions: Stopwatch/Timer/Find Me/Flashlight/Calculator.



Settings: Dial/Theme/Bright/Screen Time/Sounds/Info/Off/Reset/QR Code/Password.



Sounds: Turn on/off
Phone Audio: Control the watch play sound, such as play music or other playback sounds.
Ring Tone: Control whether the ring tone of the watch is on or off.

05 Other functions

Find watch, 12/24h time system, sedentary reminder, low battery reminder, incoming call reminder, online dial/custom dial, unit setting, turning the wrist to brighten the screen, goal achievement reminder.

06 Charging

Attach the charging cable to the watch charging port, ensuring the metal pins fully connected.

Please use the correct charging adapters which are 5V 0.5A above.

Note: If smart watch can not be powered on after being left unused for long time, please clean up the charging metal pins to make sure connecting well.

07 Parameters

Bluetooth: 5.0

Screen Size: 1.32"

Waterproof: IP68

Net Weight: 51g

Battery Type: Li-ion

Size: $\phi 45.7 \times 12.1$ mm

Charging Voltage: 5V

Battery Capacity: 280mAh

Working Temperature: 10°C ~ 40°C

08 Warranty

1. One year warranty for default hardware defectives, half of year for battery and charging cable.
2. Below reasons cause to defectives are not included in free warranty service:
 - (1) Personal assemble or disassemble.
 - (2) Falling damage during use.
 - (3) All man-made damage or due to the third party's fault, improper use (Such as: water in the smart watch, external force shattering, scratch during use etc.)
3. Please provide a warranty card with the details filled when request for after selling service.
4. Please contact with direct dealers for warranty service.
5. Please note all functions of the product are based on physical objects.

Warranty Certificate

Client Info			
Product Type		Vendor	(Stamp)
Client Name		Contact Info	
Vendor's Contact		Purchase Date	
Product IMEI Code			
Client's Address			
Vendor's Address			
Warranty Record			
Date	Problems	Diagnosis	More Info

